

# Quinta TH

---

HANSENDER  
HANDHELD TRANSMITTER  
EMETTEUR PORTABLE

Kurzanleitung

---

Quick Start Guide

---

Guide de démarrage

---

Controls and Indicators . . . . .	10
How to Attach the Microphone Head . . . . .	11
How to Insert the Batteries . . . . .	12
Switching on and Allocating the Transmitter . . . . .	13
Switching off the Transmitter . . . . .	13
Operating Modes . . . . .	13
Charging . . . . .	13

 
Thank you for selecting the Quinta TH handheld transmitter from beyerdynamic.

Please take some time to read carefully through this manual before using the product.

Please note this is only a quick start guide. For more information please refer to the “Quinta Conference System” manual on the internet at [www.beyerdynamic.com/Quinta](http://www.beyerdynamic.com/Quinta).

## Controls and Indicators


- |  |                       |
|--|-----------------------|
| ① Thread to attach the microphone head       | ④ Antenna             |
| ② Microphone button with braille inscription | ⑤ Battery compartment |
| ③ Battery compartment cover                  | ⑥ Battery indicator   |
|  | ⑦ Charging contacts   |

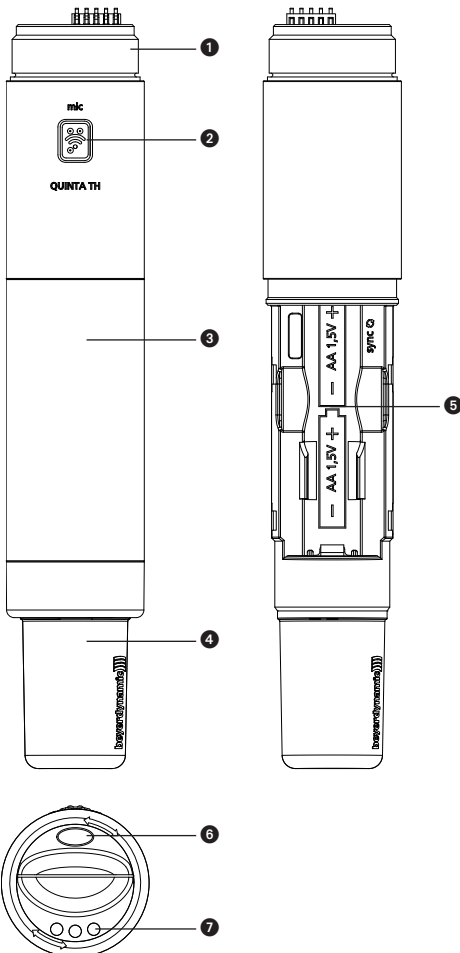


### How to Attach the Microphone Head

For the Quinta TH handheld transmitter there are different condenser and dynamic microphone capsules available.

 - Put the requested microphone head onto the thread **1** of the handheld transmitter and tighten it clockwise.
- If you want to change the microphone head, unscrew it from the transmitter by turning it anti-clockwise.
- Make sure that you switch off the handheld transmitter before changing the microphone head.

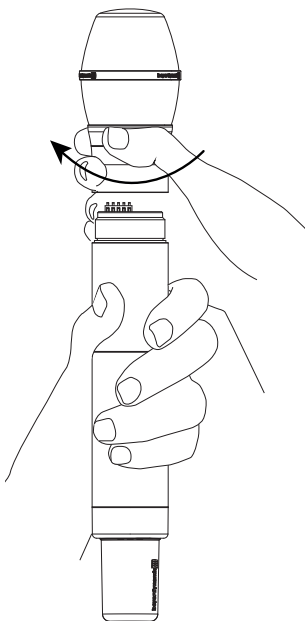


Tighten microphone head clockwise.

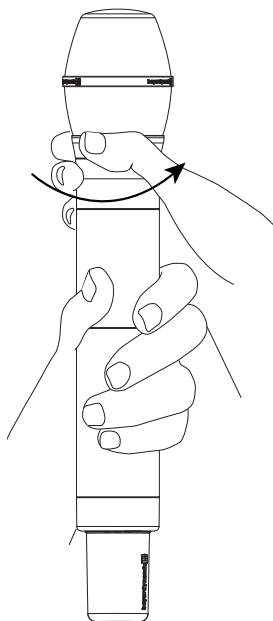 


Remove microphone head by turning it anti-clockwise.

### How to Insert the Batteries

 - Unscrew the cover of the battery compartment as indicated by the arrow.
- Slide the cover of the battery compartment downwards.
- Insert two NiMH rechargeable batteries or alkaline batteries (AA LR 6 Mignon) according to the symbols in the battery compartment.
- Slide the cover of the battery compartment upwards again and tighten it.
- When the battery indicator at the bottom of the transmitter starts to flash, the remaining operating time will be approx. 1 hour depending on the battery type used.
- From time to time you should clean the battery and charging contacts of the Quinta TH transmitter with a soft lint-free cloth moistened with white spirit or alcohol. Please remove the batteries from the battery compartment before cleaning.

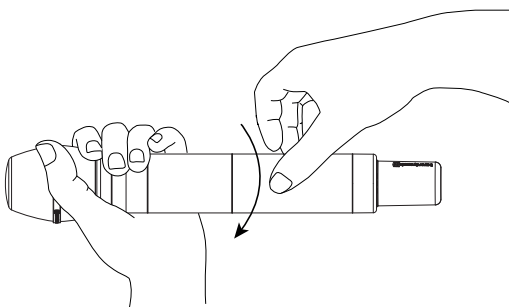

 Unscrew cover of battery compartment and remove it.

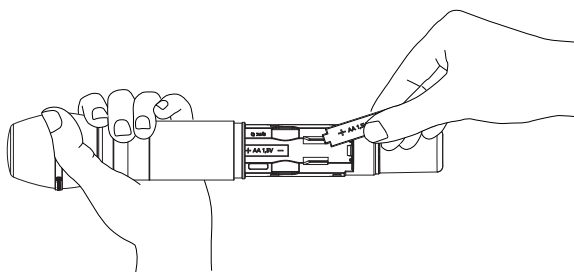


Insert batteries according to the +/- symbols into the battery compartment.

### Switching on and Allocating the Transmitter

 - The handheld transmitter is switched on by pressing the microphone button ②. When the connection to the Quinta CU control unit has been established, the microphone button ② will illuminate white to indicate the operating state.
- In order to activate the microphone or to allocate the microphone to a free channel of the Quinta CU control unit, press the microphone button ② briefly once again. Depending on the operating mode, the microphone button ② will illuminate green (normal operating mode) or red (request-to-speak mode).

### Switching off the Transmitter

- By pressing the microphone button ② (approx. 3 seconds) the handheld transmitter is switched off.
- If you press the standby button of the control unit for more than 3 seconds, the handheld transmitter will be switched off.
- Furthermore, the handheld transmitter will be switched off automatically, when it does not receive a signal from the Quinta CU control unit for more than 3 minutes.

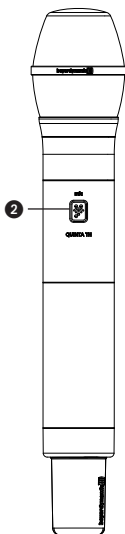

### Operating Modes

The different operating modes such as “Normal”, “Push-To-Talk” or “Voice Activation” are adjusted with the Quinta Conference software for all microphone units. The standard operating mode is “Normal”. Please refer also to the appropriate “Quinta Conference Software” or “Quinta Web Server” manual.

### Charging

If the Quinta TH handheld transmitter is operated with NiMH rechargeable batteries, you can recharge it with the WA-CD charger, with the rechargeable batteries remaining inside the transmitter or recharging the separately. For the operation, please refer to the separate manual for the “WA-CD” charger.

beyerdynamic GmbH & Co. KG  
Theresienstr. 8 | 74072 Heilbronn – Germany  
Tel. +49 (0) 7131 / 617 - 0 | Fax +49 (0) 7131 / 617 - 204  
info@beyerdynamic.de | www.beyerdynamic.com

Weitere Vertriebspartner weltweit finden Sie unter [www.beyerdynamic.com](http://www.beyerdynamic.com)  
For further distributors worldwide, please go to [www.beyerdynamic.com](http://www.beyerdynamic.com)

